

This page is intentionally left blank.

IPC932-230-FL Quick Installation Guide

Checklist

- ✓ IPC932-230-FL Series Finless System Unit x 1
- ✓ Screw Pack x 1
- ✓ Driver CD x1
- ✓ Quick manual x 1
- ✓ CPU Thermal Pad x 1
- ✓ Remote switch cable x 1
- ✓ HDD Bracket x 2
- ✓ HDD Mylar x 2
- ✓ Foot Pad x 4
- ✓ Wall mount bracket x 2
- ✓ 19V 150W Adapter (for AC Version)
- ✓ Terminal block x 1 (for DC version)

Note: Please do not try to apply power to the system if any damaged components.

Installing the CPU

Step 1 Turn off the system, and disconnect the power connector.

Step 2 Loosen screws to remove the HS cover from the chassis.

Step 3 After opening the Heatsink cover, you can locate the CPU socket as marked. Align pins of the CPU with pin holes of the socket. Be careful of the CPU's orientation that you need to align the arrow mark on the CPU with the arrow key on the socket. Please remove the Mylar before you install the CPU into the socket.



Installing the Memory Module

Step 1 Turn off the system, and disconnect the power connector.

Step 2 Loosen screws to remove the Heatsink cover from the chassis


Step 3 Install the memory module into the socket and push it firmly down until it is fully seated. The socket latches are clipped on to the edges of the SO-DIMM.



Installing the Hard Disk Drive

Step 1 Turn off the system, and disconnect the power connector.

Step 2 Loosen screws to remove the top cover from the chassis.

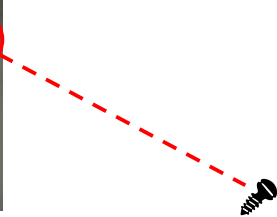

Step 3 Open the top cover and locate the Hard Disk Drives as red marked.



Step 4 There are 2 thermal pad and 2 HDD brackets in the accessory box, please sticker the HDD Mylar before assembly the HDD with the bracket.



Step 5 Insert the HDD module into the HDD socket.

