

## Installing the swappable HDD/SSD and CFast Card

**Step 1** Turn off the system, and unplug the power cord. Locate thumb screw at the front side, unlock and loosen screws.



**Step 2** Assembly the HDD/SSD bracket together with the SATA HDD/SSD



**Step 3** Slide CFast card or HDD/SSD into slot carefully



**Step 4** Fasten screws of HDD/CFast bracket





## tBOX321-870-FL Quick Installation Guide

### Checklist

- ✓ tBOX321-870-FL System Unit x 1
- ✓ Quick Installation Guide x 1
- ✓ Screws Pack x 1
- ✓ Wallmount Bracket x 1
- ✓ Optional Mini Card Module
- ✓ Optional M12 power cable
- ✓ Optional M12 Audio cable
- ✓ Optional remote switch cable
- ✓ CD x 1 (for Driver & Manual)
- ✓ Foot Pad x4
- ✓ DIO female connector
- ✓ Key x2
- ✓ Optional HDD/SSD
- ✓ Optional CFast Card
- ✓ Optional M12 LAN cable(s)
- ✓ Optional M12 USB cable(s)



**Note:** Please contact your local vendors if any damaged or missing items. **DO NOT** apply power to the board if there is any damaged component.

### Dimensions

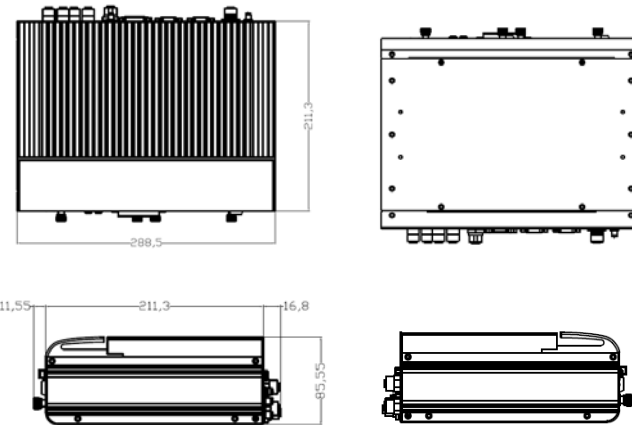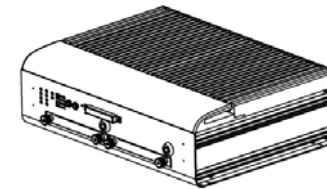

## I/O Outlets

The following figures show you I/O outlets on front and rear panels of the tBOX321-870-FL Series.

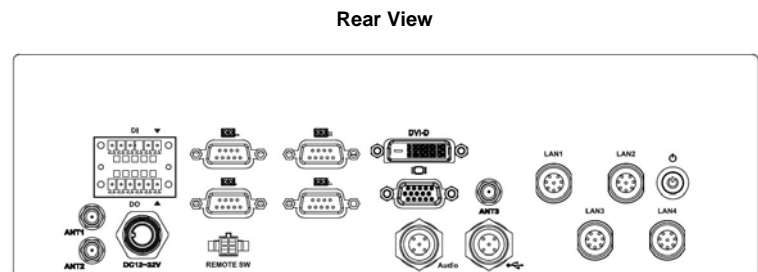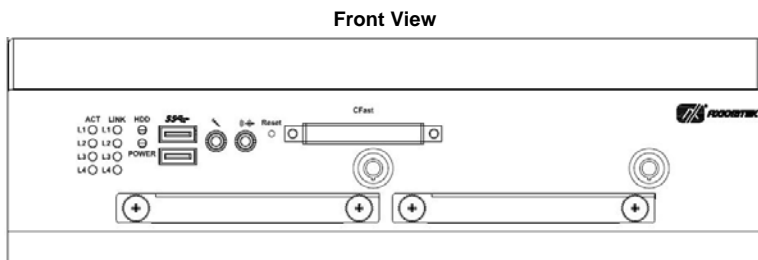


## Installing the PCI Express Mini Card

**Step 1** Turn off the system, and unplug the power cord.


**Step 2** Turn the system upside down to locate screws at the bottom, loosen screws to remove the bottom cover.



**Step 3** Slide SIM or Mini card into slot cautiously

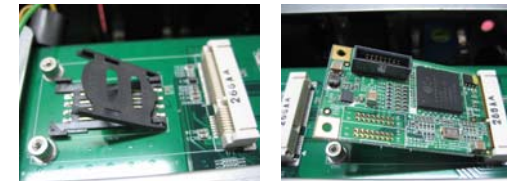

**Step 4** Fasten screw of Express Mini Card.

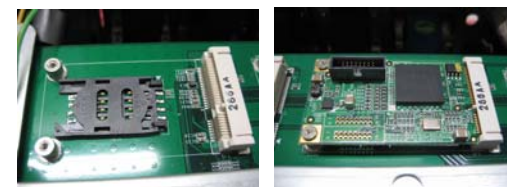

**Step 5** Close the cover to the chassis, and fasten all screws.